





Instrukcja instalacji pokrywki oraz odpływu


Wanna wolnostojąca

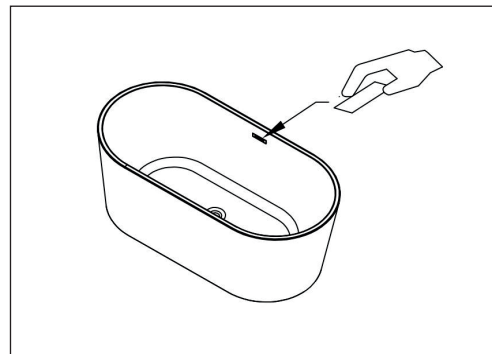


1. Remove the overflow cap originally installed on the bathtub (do not use sharp tools to avoid scratching the bathtub).

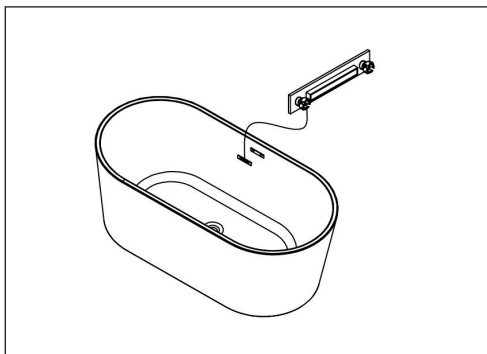

2. Open the new overflow cap, align it with the hole, and insert it into the 1. Remove the overflow cap originally installed on the bathtub (do not use sharp tools to avoid scratching the bathtub) overflow tank.

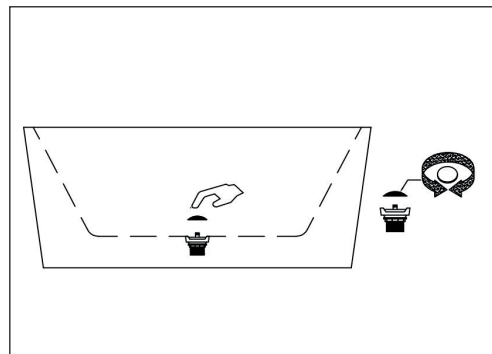

3. Turn clockwise to remove the drain that was originally mounted on the tub.

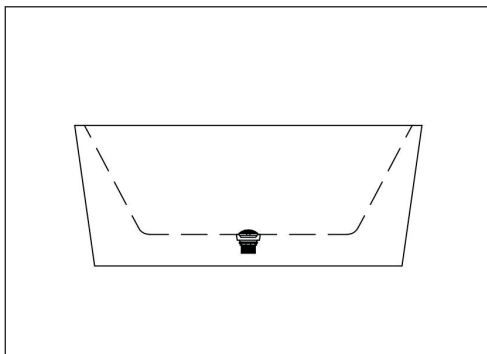

4. Install a new bathtub drain.




- Przed przystąpieniem do instalacji należy uważnie przeczytać wszystkie instrukcje.
- Ze względu na złożoność procedury instalacji wymagany jest profesjonalny hydraulik.
- Specyfikacje i wskazówki mogą ulec zmianie bez powiadomienia.


BALNEO POLSKA Sp. z o.o.

tel: +48 22 740 72 74, tel: +48 737 923 005, tel: +48 799 787 334,
e-mail: biuro@balneo.pl, www.balneo.pl




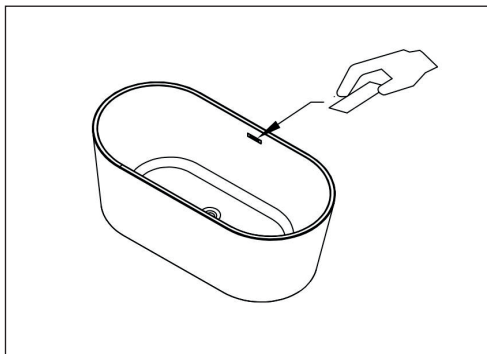


1. Zdejmij korek wlewu pierwotnie zainstalowany na wannie (nie używaj ostrych narzędzi, aby uniknąć zarysowania wanny).

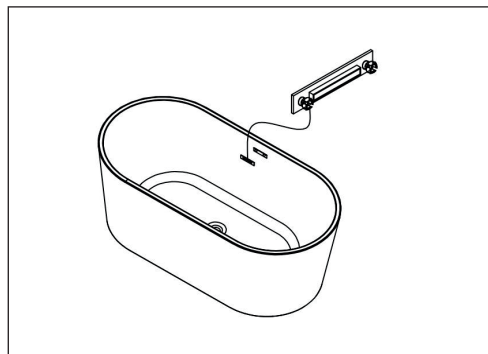

2. Otwórz nowy korek przelewowy, ustaw go w linii z otworem i włóż do zbiornika przelewowego.

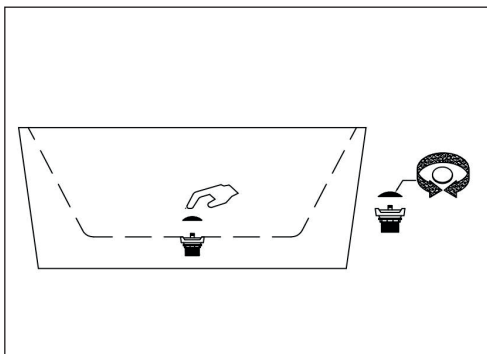

3. Obróć zgodnie z ruchem wskazówek zegara, aby wyjąć odpływ, który był pierwotnie zamontowany w wannie.

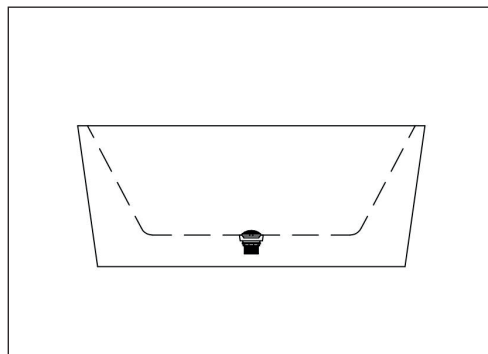

4. Zainstaluj nowy odpływ.



Instructions for replacing the overflow cap and bathtub drain

Freestanding Bathtub



- Please read all instructions carefully before proceeding with installation.
- Due to the complexity of the installation procedure a professional plumber is required.
- Specifications and directions may change without notice.

BALNEO POLSKA Sp. z o.o.

tel: +48 22 740 72 74, tel: +48 737 923 005, tel: +48 799 787 334,
e-mail: biuro@balneo.pl, www.balneo.pl

